



ALTERNATOR (40 AMP.) 62 01-10-80

A.M. NO. 316 3761

AUTO-LITE NO. ALD-5005

KEY NO.	AUTO-LITE NUMBER	A.M. GROUP	A.M. PART NUMBER	DESCRIPTION	PER CAR
1	GBM-21B	3.010	311 8776	NUT, Rotor Shaft Drive End (Replaces 311 8776)	1
2	12X-864	3.010	311 8777	LOCKWASHER, Rotor Shaft Drive End Nut	1
3	PU-611	3.010	320 3645	PULLEY, Drive	1
4	PU-602	3.010	320 3644	FAN, Ventilating (Less Pulley)	1
5	ALA-1003			HEAD, Drive End	1
6	GG-164			WASHER, Felt	1
7	X-3416			BEARING, Ball	1
8	ALA-36			RETAINER, Bearing	1
9	8X-3427			SCREW, Bearing Retainer (#10-32 x 1/2)	3
10	GAR-171			RING, Snap	1
11	ALA-2006			ROTOR ASSEMBLY	1
12	X-3418A			SCREW, Ground Brush	1
13	ALD-2008			STATOR ASSEMBLY	1
14	XA-932			CLAMP, Stator Lead To Rectifier Wire	6
15	XA-944			RECTIFIER, Negative	3
16	ALD-2302S			HEAD ASSEMBLY, Commutator End	1
17	12X-196			LOCKWASHER, Mounting Stud Nut (#10)	2
18	8X-173			NUT, Mounting Stud (Hexagon) (#10-32)	2
19	X-3417			BEARING, Roller	1
20	12X-196			LOCKWASHER, Thru Bolt	4
21	ALA-20			BOLT, Thru	4
22	ALC-21			SPACER, Rotor Shaft	1
23	GBM-128			RETAINER, Felt Washer	1
24	ALA-35			GASKET	1
25	X-261	3.010	320 3643	KEY, Woodruff (#6)	1
26	GR-32			RETAINER, Drive End	1
27	ALA-19			SPRING, Brush	2
28	ALA-1012S			BRUSH SET	1
29	XA-943			RECTIFIER, Positive	3
30	ALA-4			PLATE, Rectifier Mounting	2