

ILLUSTRATIONS INDEX

GROUP 3 ELECTRICAL - INSTRUMENT CLUSTER (Continued)

ALTERNATOR FAN, PULLEY AND MOUNTING (MOTOROLA) 64-65 ALL MODELS (OHV-199) (OHV-232).....	IL 3 - 19
ALTERNATOR FAN, PULLEY AND MOUNTING (MOTOROLA) 63 THRU CURRENT 10-80 (V8)...	IL 3 - 20
ALTERNATOR FAN, PULLEY AND MOUNTING (LEECE-NEVILLE)(60 AMP.) 63 THRU CURRENT 10-80 (V8).....	IL 3 - 21
BACK-UP LAMP ASSEMBLY 63 THRU CURRENT 10-80: TYPICAL OF 64 01 FACTORY INSTALLATION	IL 3 - 34
BACK-UP LAMP KIT (FIELD INSTALLATION) 64-65 01	IL 3 - 35
BATTERY BOX 60 01.....	IL 3 - 23
BATTERY BOX 60-61 10	IL 3 - 23
BATTERY BOX 60-61 20	IL 3 - 24
BATTERY BOX 60-61 80	IL 3 - 24
BATTERY BOX 62-63 01	IL 3 - 9
BATTERY BOX 64 01.....	IL 3 - 9
BATTERY BOX 60 THRU CURRENT 10 (SIX): 65 80 (SIX).....	IL 3 - 10
BATTERY BOX 63 THRU CURRENT 10-80 (V8).....	IL 3 - 10
CARGO AREA LAMP 61 THRU 65 08-18-88.....	IL 3 - 50
CIGAR LIGHTER 60 THRU 65 01.....	IL 3 - 50
COURTESY AND GLOVE BOX LAMP KIT 64-65 10-80	IL 3 - 32
DIRECTIONAL SIGNAL LEVER 60 10-20-80.....	IL 3 - 5
DOVE LAMP 63 THRU CURRENT 08-18-88	IL 3 - 52
GENERATOR FAN, PULLEY AND MOUNTING 63-64 01 (LAC)	IL 3 - 17
GENERATOR FAN, PULLEY AND MOUNTING 63 10 (LAC)	IL 3 - 17
HEADLAMP ASSEMBLY 60 01	IL 3 - 25
HEADLAMP 60 10-20-80	IL 3 - 2
HEADLAMP ASSEMBLY 61 THRU 63 01.....	IL 3 - 26
HEADLAMP 61 10-20: 62 10-80: TYPICAL OF 61 80.....	IL 3 - 1
HEADLAMP ASSEMBLY 63 10-80.....	IL 3 - 27
HEADLAMP ASSEMBLY 64 10-80.....	IL 3 - 37
HEADLAMP ASSEMBLY 64-65 01.....	IL 3 - 33
HEADLAMP ASSEMBLY 65 10	IL 3 - 38
HEADLAMP ASSEMBLY 65 80	IL 3 - 39
IGNITION SWITCH 60 THRU 62 ALL MODELS: 63 01	IL 3 - 25
IGNITION WIRING 60 THRU CURRENT 01-10 (OHV)	IL 3 - 22
INSTRUMENT CLUSTER 60 01.....	IL 3 - 30
INSTRUMENT CLUSTER 61 THRU 63 01: 60-61 10-20-80	IL 3 - 31
INSTRUMENT CLUSTER 64-65 01	IL 3 - 11
INSTRUMENT CLUSTER 63-64 10-80	IL 3 - 12
INSTRUMENT CLUSTER 65 10 (EXCEPT MARLIN).....	IL 3 - 48
INSTRUMENT CLUSTER 65 50 (MARLIN): 65 80	IL 3 - 49
LUGGAGE COMPARTMENT LAMP ASSEMBLY 64-65 ALL MODELS.....	IL 3 - 32
PARKING AND FRONT DIRECTIONAL SIGNAL LAMP 60 01	IL 3 - 3
PARKING AND FRONT DIRECTIONAL SIGNAL LAMP 60 10-20-80.....	IL 3 - 3
PARKING AND FRONT DIRECTIONAL SIGNAL LAMP 63 THRU CURRENT 10-80: 64-65 01.....	IL 3 - 40
REAR LICENSE PLATE LAMP 60 02-05-06 (WWC).....	IL 3 - 6
REAR LICENSE PLATE LAMP 60 04	IL 3 - 7
REAR LICENSE PLATE LAMP 60-61 02-05-06 (LWC): 60-61 10-20-80.....	IL 3 - 8
REAR LICENSE PLATE LAMP 61 THRU 63 01.....	IL 3 - 43
REAR LICENSE PLATE LAMP 64 01: 65 ALL MODELS.....	IL 3 - 43
REAR LICENSE PLATE LAMP 63-64 10-80.....	IL 3 - 44
REAR QUARTER LAMP 65 09.....	IL 3 - 53
REAR QUARTER LAMP 65 19 (EXCEPT MARLIN).....	IL 3 - 51
REAR QUARTER LAMP 65 59-7 (MARLIN)	IL 3 - 53
REAR QUARTER LAMP 65 89.....	IL 3 - 51
REAR QUARTER LAMP 63-64 09	IL 3 - 52
STEERING WHEEL AND HORN BUTTON 60 01	IL 3 - 8
STEERING WHEEL AND HORN BUTTON 64 01	IL 3 - 45
STEERING WHEEL AND HORN BUTTON 63 10-80: 64-65 10	IL 3 - 47
STEERING WHEEL AND HORN RING 60 THRU 62 10-20-80: 61 THRU 63 01.....	IL 3 - 28
STEERING WHEEL AND HORN RING 64 01.....	IL 3 - 46
STEERING WHEEL AND HORN RING 63-64 10-80	IL 3 - 29
TAIL, STOP AND REAR DIRECTIONAL SIGNAL LAMP 60 01	IL 3 - 4
TAIL, STOP AND REAR DIRECTIONAL SIGNAL LAMP 63 01	IL 3 - 13
TAIL, STOP AND REAR DIRECTIONAL SIGNAL LAMP 64 02-05-06-07-09.....	IL 3 - 14
TAIL, STOP AND REAR DIRECTIONAL SIGNAL LAMP 64 08	IL 3 - 13
TAIL, STOP AND REAR DIRECTIONAL SIGNAL LAMP 65 05-06-07-09	IL 3 - 40