

ILLUSTRATIONS INDEX

GROUP 3 ELECTRICAL - INSTRUMENT CLUSTER (Continued)

TAIL, STOP AND REAR DIRECTIONAL SIGNAL LAMP 65 08	IL 3 - 41
TAIL, STOP AND REAR DIRECTIONAL SIGNAL LAMP 60-61 10-20	IL 3 - 4
TAIL, STOP AND REAR DIRECTIONAL SIGNAL LAMP 60 80	IL 3 - 5
TAIL, STOP AND REAR DIRECTIONAL SIGNAL LAMP 63 15-16-85-86	IL 3 - 15
TAIL, STOP AND REAR DIRECTIONAL SIGNAL LAMP 63 18-88.....	IL 3 - 15
TAIL, STOP AND REAR DIRECTIONAL SIGNAL LAMP 64 15-16-19-85-89.....	IL 3 - 16
TAIL, STOP AND REAR DIRECTIONAL SIGNAL LAMP 64 18-88.....	IL 3 - 16
TAIL, STOP AND REAR DIRECTIONAL SIGNAL LAMP 65 15-16-17-19 (EXCEPT MARLIN)	IL 3 - 41
TAIL, STOP AND REAR DIRECTIONAL SIGNAL LAMP 65 59-7 (MARLIN)	IL 3 - 54
TAIL, STOP AND REAR DIRECTIONAL SIGNAL LAMP 65 18	IL 3 - 42
TAIL, STOP AND REAR DIRECTIONAL SIGNAL LAMP 65 80	IL 3 - 42

GROUP 4 FUEL - EXHAUST

ACCELERATOR LINKAGE 60 THRU 63 01 (LHD-LHE)	IL 4 - 1
ACCELERATOR LINKAGE 63 01 (OHV-WST-LDT).....	IL 4 - 2
ACCELERATOR LINKAGE 64-65 01 (LHE)	IL 4 - 3
ACCELERATOR LINKAGE 64-65 01 (LHD-OHV-196).....	IL 4 - 4
ACCELERATOR LINKAGE 60-61 01-10 (LHD-OHV).....	IL 4 - 5
ACCELERATOR LINKAGE 60-61 20-80 (LHD)	IL 4 - 6
ACCELERATOR LINKAGE 63 10 (1 st TYPE-LHD-OHV)	IL 4 - 7
ACCELERATOR LINKAGE 63 10 (2 nd TYPE-LHD-OHV-196): 64 10 (LHD-OHV-196)	IL 4 - 8
ACCELERATOR LINKAGE 64-65 ALL MODELS (LHD-OHV-199)(LHD-OHV-232).....	IL 4 - 35
ACCELERATOR LINKAGE 63-64 10-80 (V8)	IL 4 - 9
ACCELERATOR LINKAGE 65 10-80 (LHD-V8)	IL 4 - 43
CARBURETOR FUEL AND VACUUM LINES 64-65 01 (LHE)	IL 4 - 51
CARBURETOR FUEL AND VACUUM LINES 65 01-10 (OHV-199)(WEW)	IL 4 - 50
CARBURETOR FUEL AND VACUUM LINES 65 01-10 (196-LDT)	IL 4 - 52
CARBURETOR FUEL AND VACUUM LINES 65 10 (232-LDT)	IL 4 - 53
CARBURETOR FUEL AND VACUUM LINES 65 10 (232-WDT)	IL 4 - 54
CARBURETOR FUEL AND VACUUM LINES 65 10-80 (287-V8).....	IL 4 - 55
CARBURETOR FUEL AND VACUUM LINES 65 10-80 (327-V8)	IL 4 - 56
EXHAUST SYSTEM 60 01 (LHE).....	IL 4 - 17
EXHAUST SYSTEM 60 10.....	IL 4 - 18
EXHAUST SYSTEM 60 20-80 (LDE)	IL 4 - 19
EXHAUST SYSTEM 62 01 (LHE).....	IL 4 - 20
EXHAUST SYSTEM 62 01-10 (OHV)	IL 4 - 21
EXHAUST SYSTEM 63 01 (LHD-LHE)	IL 4 - 22
EXHAUST SYSTEM 63 02-04-05-06-08 (OHV)	IL 4 - 23
EXHAUST SYSTEM 61 THRU 63 07 (OHV)	IL 4 - 24
EXHAUST SYSTEM 64-65 02-05-06-09 (LHE).....	IL 4 - 25
EXHAUST SYSTEM 64 02-05-06-09 (OHV).....	IL 4 - 27
EXHAUST SYSTEM 64-65 08 (LHE)	IL 4 - 26
EXHAUST SYSTEM 64 07-08 (OHV)	IL 4 - 28
EXHAUST SYSTEM 65 05-06-09 (OHV)	IL 4 - 45
EXHAUST SYSTEM 65 07-08 (OHV)	IL 4 - 46
EXHAUST SYSTEM 63-64 10 (OHV-196-L3S)	IL 4 - 29
EXHAUST SYSTEM 63-64 10-80 (V8-L3S).....	IL 4 - 32
EXHAUST SYSTEM 64 10 (OHV-232-L3S)	IL 4 - 36
EXHAUST SYSTEM 65 10-80 (SIX-L3S)	IL 4 - 47
EXHAUST SYSTEM 65:10-80 (V8-L3S).....	IL 4 - 48
EXHAUST SYSTEM 63 18 (1 st TYPE-OHV-196-W3S).....	IL 4 - 30
EXHAUST SYSTEM 63 18 (2 nd TYPE-OHV-196-W3S): 64 18 (OHV-196-W3S)	IL 4 - 31
EXHAUST SYSTEM 64 18 (OHV-232-W3S): 65 18-88 (SIX-W3S)	IL 4 - 37
EXHAUST SYSTEM 63 18-88 (1 st TYPE-V8-W3S)	IL 4 - 33
EXHAUST SYSTEM 63 18 (2 nd TYPE-V8-W3S): 64 18-88 (V8-W3S)	IL 4 - 34
EXHAUST SYSTEM 65 10-80 (V8-W3S)	IL 4 - 49
GASOLINE TANK AND LINES 60-61 ALL MODELS	IL 4 - 10
GASOLINE TANK AND LINES 62 ALL MODELS	IL 4 - 11
GASOLINE TANK AND LINES 63 01	IL 4 - 12
GASOLINE TANK AND LINES 64-65 05-06-07-09.....	IL 4 - 13
GASOLINE TANK AND LINES 64-65 08.....	IL 4 - 14
GASOLINE TANK AND LINES 63-64 10-80 (L3S).....	IL 4 - 15
GASOLINE TANK AND LINES 63 THRU CURRENT 18-88 (W3S)	IL 4 - 16
GASOLINE TANK AND LINES 65 10-80 (L3S)	IL 4 - 44
HAND THROTTLE CONTROL 64-65 01 (FLEET SALES).....	IL 4 - 39