

## ILLUSTRATIONS INDEX

### GROUP 8 BRAKES - WHEELS (Continued)

BRAKE MASTER CYLINDER (BENDIX) 62 ALL MODELS (LPB) .....	IL 8 - 10
BRAKE MASTER CYLINDER 63 THRU 65 ALL MODELS (LPB).....	IL 8 - 17
BRAKE PEDAL AND SUPPORT 63 THRU 65 10-80 .....	IL 8 - 28
BRAKE SHIMS, RETAINER AND SEAL 60-61 20: 60 THRU 62 80.....	IL 8 - 33
BRAKE WHEEL CYLINDER 60 THRU CURRENT ALL MODELS .....	IL 8 - 25
CALIPER DISC FRONT BRAKE 65 10-80 (WDB) .....	IL 8 - 15
FRONT BRAKE 61-62 20-80 .....	IL 8 - 21
FRONT BRAKE 62-63 10 (WAB) .....	IL 8 - 20
FRONT BRAKE 60-61 10 (LAB) .....	IL 8 - 19
FRONT BRAKE AND WHEEL 64-65 01 (LHE)(OHV-196)(OHV-199) .....	IL 8 - 1
FRONT BRAKE AND WHEEL 65 01 (OHV-232): 64-65 10 (SIX-LDB).....	IL 8 - 2
FRONT BRAKE AND WHEEL 63 THRU CURRENT 10 (V8-LDB): 63 THRU CURRENT 80 (LDB) ..	IL 8 - 3
FRONT WHEEL 60-61 ALL MODELS .....	IL 8 - 32
HAND OPERATED PARKING BRAKE 64-65 01 .....	IL 8 - 7
PARKING BRAKE LINKAGE (PEDAL TO YOKE) 60 THRU 62 10-80 (LHD) .....	IL 8 - 30
PARKING BRAKE LINKAGE (YOKE TO DRUM) 60 THRU 62 10-80 (LHD).....	IL 8 - 30
PARKING BRAKE LINKAGE 61 THRU 63 01 .....	IL 8 - 29
PARKING BRAKE LINKAGE 63 10-80 .....	IL 8 - 31
PARKING BRAKE LINKAGE 65 10-80 .....	IL 8 - 18
POWER BRAKE HYDROVAC 60 THRU 62 10-80 (RHD-WPB): 63 THRU 65 10-80 (V8-RHD-WPB-LDB) .....	IL 8 - 37
POWER BRAKE MASTER CYLINDER 63-64 ALL MODELS (WPB).....	IL 8 - 36
POWER BRAKE MASTER CYLINDER (BENDIX) 62 ALL MODELS (LHD-WPB).....	IL 8 - 35
POWER BRAKE POWER UNIT 62 THRU 65 ALL MODELS (LHD-WPB).....	IL 8 - 34
POWER BRAKE UNIT 61 01 (LHD-WPB): 60-61 ALL MODELS (LHD-WPB) .....	IL 8 - 38
REAR BRAKE 61-62 20-80.....	IL 8 - 24
REAR BRAKE 60-61 10 (LAB) .....	IL 8 - 22
REAR BRAKE 62-63 10 (WAB) .....	IL 8 - 23
REAR BRAKE AND WHEEL 64-65 01 (LHE)(OHV-196)(OHV-199).....	IL 8 - 4
REAR BRAKE AND WHEEL 65 01 (OHV-232): 64-65 10 (SIX-LDB) .....	IL 8 - 5
REAR BRAKE AND WHEEL 63 THRU CURRENT 10 (V8-LDB): 63 THRU CURRENT 80 (LDB)....	IL 8 - 6
REAR BRAKE AND WHEEL 65 10-80 (WDB).....	IL 8 - 16
REAR HUB AND DRUM 60-61 20-80.....	IL 8 - 32
SPARE WHEEL CARRIER SUPPORT 60 01 (WWC) .....	IL 8 - 33
SPARE WHEEL MOUNTING 60 THRU CURRENT ALL MODELS.....	IL 8 - 11

### GROUP 9 REAR AXLE - PROPELLER SHAFT

PROPELLER SHAFT 60 THRU CURRENT 01.....	IL 9 - 5
REAR AXLE 60 THRU 64 ALL MODELS (LLD) .....	IL 9 - 1
REAR AXLE 65 ALL MODELS (LLD) .....	IL 9 - 12
REAR AXLE 60 THRU 64 01-10 (WLD-SIX): 65 01 (WLD): 65 10 (OHV-196-WLD)(OHV-199-WLD)..	IL 9 - 2
REAR AXLE 65 10-80 (OHV-232-WLD) .....	IL 9 - 13
REAR AXLE 60 THRU 64 10-20-80 (V8-WLD) .....	IL 9 - 3
REAR AXLE 65 10-80 (V8-WLD) .....	IL 9 - 14
SWAY STABILIZER AND TRUSS RODS 62 THRU CURRENT 10-20-80.....	IL 9 - 4
TORQUE TUBE AND PROPELLER SHAFT 60-61 10 (WST)(WOD).....	IL 9 - 6
TORQUE TUBE AND PROPELLER SHAFT 61 10 (WAT): 62 10 (9/34) OR (13/43) RATIO .....	IL 9 - 7
TORQUE TUBE AND PROPELLER SHAFT 62 10 (8/35) OR (9/37) RATIO: 61-62 20-80 (WST)(WOD) .....	IL 9 - 8
TORQUE TUBE AND PROPELLER SHAFT 61-62 20-80 (WAT) .....	IL 9 - 9
TORQUE TUBE AND PROPELLER SHAFT 63 THRU CURRENT 10-80 (SIX).....	IL 9 - 10
TORQUE TUBE AND PROPELLER SHAFT 63 THRU CURRENT 10-80 (V8) .....	IL 9 - 11

### GROUP 10 FRONT SUSPENSION - STEERING GEAR

ADJUSTING STEERING WHEEL COLUMN 64 10-80 (WAT-WAW).....	IL 10 - 9
ADJUSTING STEERING WHEEL COLUMN 64 10-80 (WFGS-WAW-WPS) .....	IL 10 - 20
ADJUSTING STEERING WHEEL COLUMN 65 10 (LCV-WCGS-WAW) .....	IL 10 - 21
ADJUSTING STEERING WHEEL COLUMN 65 17 (WCGS-WAW): 65 80 (WCGS-WAW).....	IL 10 - 22
ADJUSTING STEERING WHEEL COLUMN 65 10 (LCV-WFGS-WAW) .....	IL 10 - 23
ADJUSTING STEERING WHEEL COLUMN 65 17 (WFGS-WAW): 65 80 (WFGS-WAW).....	IL 10 - 24
FRONT SUSPENSION 60 THRU 63 01 .....	IL 10 - 1